



ISSPRO, INC. 2515 N.E. Riverside Way, Portland OR 97211

Telephone: (503) 288-4488 ♦ Toll Free: (800) 888-8065

FAX: (503) 249-2999

**ISSPRO 2" Dia. Ignition Tachometers**  
**P/N R8508 (4k scale), R8509 (5k scale), R8510 (6k scale)**

**General Information:**


Operating Voltage: 10-16 VDC

Reverse Voltage Protected

---

**Calibration:**

ISSPRO ignition tachs are pre-calibrated for 4, 6 or 8 cylinder, single ignition coil engines. To set the tach for your particular engine, remove the plastic hole plug (in the rear of the tach – lower right) and place the jumper in the position corresponding to the number of cylinders of the engine. The cylinder number is marked on the circuit board.

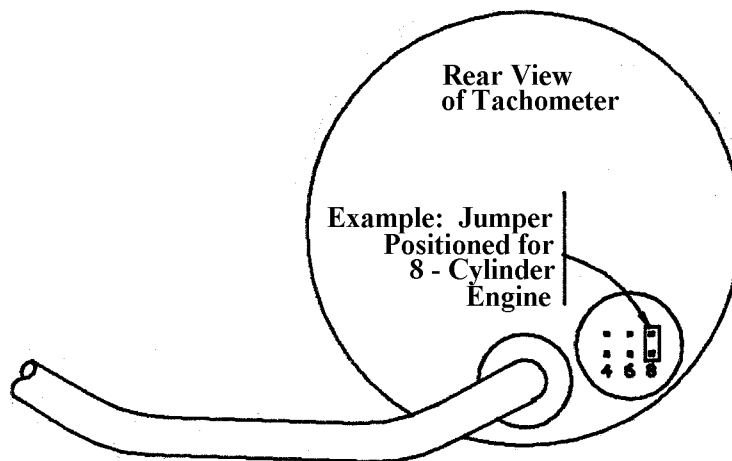

**Installation:**

1. Set the tach to the proper number of cylinders as described above.
2. Mount the tach in the desired position.
3. Connect the wires as shown in the wiring diagram. NOTE: The white wire may also be connected to the "TACH" connection of the distributor, if this connection is available.

# Ignition Tach Wiring Diagram

